

25100-PHX(-LC)

PARTS & INSTALLATION MANUAL **25100-PHX(-LC)**

Included in this manual:

25100-PHX(-LC)

- Stabilizer with Hydraulic Pullout and Hydraulic Legs
- Available in "Less Crosstube" (-LC) configuration

VENCO VENTURO INDUSTRIES LLC 12110 BEST PLACE | CINCINNATI, OHIO 45241

VENCO VENTURO INDUSTRIES LLC

25100-PHX(-LC) INST-25440 - 9/5/2024 (Rev: A3)

7607200A	SECTION 200: INSTALLATION
25480	INSTALLATION GUIDELINES
25488	ISOMETRIC VIEW - SHORT LEG
25489	OVERALL DIMENSIONS - SHORT LEG
25490	OVERALL DIMENSIONS - LONG LEG
25/8/-2	DECOMMENDED MOUNTING TO TRUE

25484-2 25448

25447-1 25446 25449

25485

25428-2

OVERALL DIMENSIONS - LONG LEG
RECOMMENDED MOUNTING TO TRUCK FRAME
SMALL PARTS IMAGE
SELECTOR VALVE OVERVIEW
HYDRAULIC MAPPING - 1 OF 2
HYDRAULIC MAPPING - 2 OF 2
DEPARTURE ANGLE, REAR-MOUNTED STABILIZERS
MOUNTING THE LEGS
LESS-CROSSTUBE ASSY - 1 OF 3
LESS-CROSSTUBE ASSY - 2 OF 3
LESS-CROSSTUBE ASSY - 3 OF 3 25443 25444 25445

SECTION 400: REPLACEMENT PARTS 25100-PHX REPLACEMENT PARTS LIST 25100-PHX REPLACEMENT PARTS DRAWING PULLOUT REPLACEMENT PARTS LIST PULLOUT REPLACEMENT PARTS DRAWING LEG REPLACEMENT PARTS LIST LEG REPLACEMENT PARTS DRAWING WARRANTY PAGE 7607400A 25442 25441 25451 25450 25452 25453

12-00073_VNT1

SECTION 200

INSTALLATION



STABILIZER INSTALLATION GUIDELINES

Read instructions completely prior to starting installation. If this unit is to be installed on a Venturo crane body, continue to the stabilizer assembly section of this manual.

Prior to mounting the stabilizer crosstube, orient the stabilizer so the longer pullout is on the crane side of the truck.

REAR MOUNTED

Crosstube should be centered at the rear of the truck and tied into the truck frame, body longsills, and crane support. Installer is responsible for proper mounting brackets and hardware that will be needed during this process. If unit is to be mounted on a service body, do not attach crosstube to body sheet metal unless otherwise specified. Allow clearance between crosstube and body for the stabilizer legs to be fully retracted. Consult chassis up-fitter guide prior to installation for proper welding and bolting procedures to chassis.

See the 'RECOMMENDED MOUNTING TO TRUCK FRAME' page

Leg installation (refer to assembly section of manual) legs are adjustable to maintain proper ground penetration of 4" to 6". The stabilizer is designed to level the truck and not lift the chassis off of the ground. They are designed to work in conjunction with the chassis suspension to stabilize the unit with the bulk of the load being supported by the chassis suspension and tires. Tires must be set at the proper pressure according to the chassis manufacture, stabilizers fully extended, and legs deployed on firm, level ground prior to crane use.

IMPORTANT - When legs are fully retracted in the stowed position, a 15° degree departure angle between the bottom of the rear tire and the lowest point of the stabilizer is recommended.

See the 'DEPARTURE ANGLE' page

For hydraulic stabilizers, the control valve and selector valve are supplied in kit. It is the installer's responsibility to supply necessary hoses and fittings between these valves and stabilizer. Refer to proper hydraulic schematic for your particular stabilizer model.


IMPORTANT - The selector valve is designed to separate the crane and stabilizer hydraulic circuits. This will not allow stabilizer use while in crane mode.

FRONT MOUNTED

Front mounted crosstube will be located on top of the chassis frame and welded to body longsills. Additional shear plates (installer supplied) to be welded to crosstube and bolted to chassis frame. Crosstube to be spaced away from body for leg clearance when fully retracted. See assembly section of manual for pullout and leg installation detail.





INSTALLATION GUIDELINES	12-08-23A	C200
STABILIZERS	SUPERSEDES 01-17-17	25480

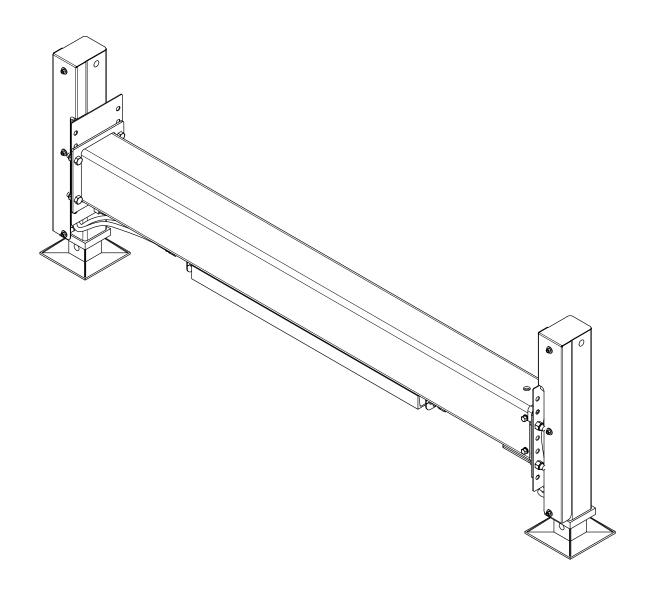



ISOMETRIC VIEW	01-20-17	02
25100-PHX OUTRIGGER (WITH SHORT LEGS)	SUPERSEDES -	25488

 

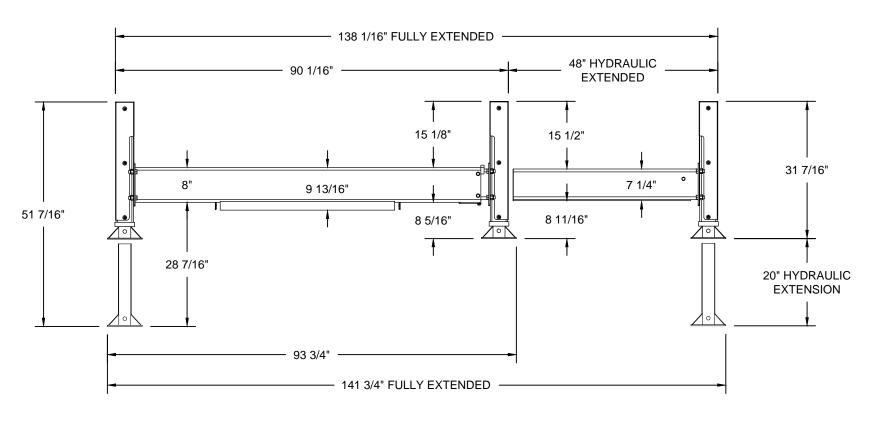


HIGHEST LEG MOUNT SHOWN


6" RANGE ADJUSTABLE FOR LEG MOUNTING AT 2" INCREMENTS



;	OVERALL DIMENSIONS	01-20-17	PAGE 03
	25100-PHX OUTRIGGER WITH SHORT LEGS	SUPERSEDES -	25489

 VENCO VENTURO INDUSTRIES LLC
 CINCINNATI, OHIO



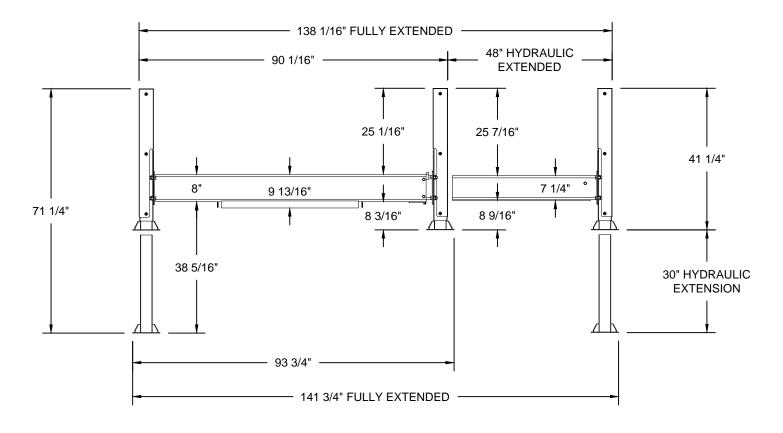


HIGHEST LEG MOUNT SHOWN

6" RANGE ADJUSTABLE FOR LEG MOUNTING AT 2" INCREMENTS



;	OVERALL DIMENSIONS	01-20-17	PAGE 04
	25100-PHX OUTRIGGER WITH LONG LEGS	SUPERSEDES -	25490

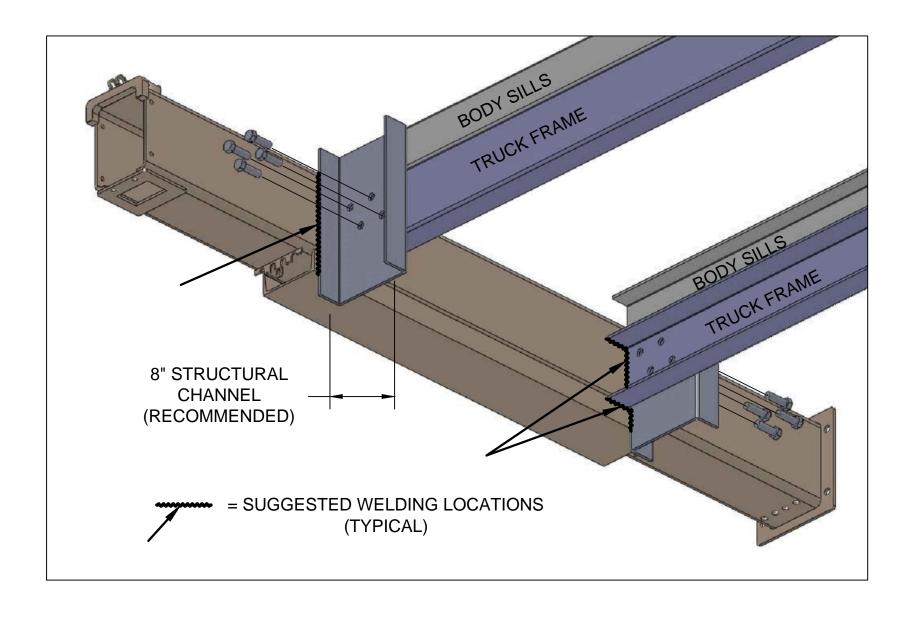


® VENCO VENTURO INDUSTRIES LLC	RECOMMENDED MOUNTING TO TRUCK FRAME	TING TO TRUCK FRAME 12-08-23A	
ENTURO VENTURO INDUSTRIES ELEC		SUPERSEDES	05404.0
	25100/26100 SERIES STABILIZERS	01-20-17	25484-2




ENTURO®

VENCO VENTURO INDUSTRIES LLC CINCINNATI, OHIO

SMALL PARTS IMAGE	01-20-17A	06	
	SUPERSEDES	05440	
25100-PHX OUTRIGGERS	03-11-16	25448	

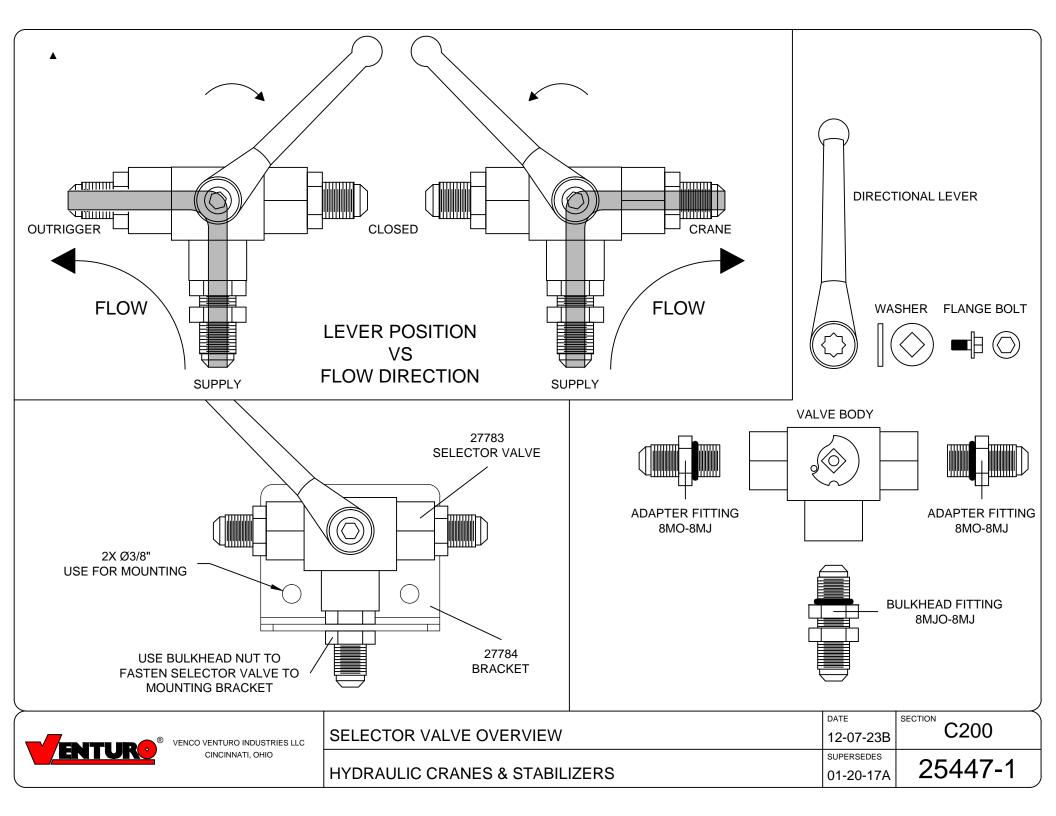

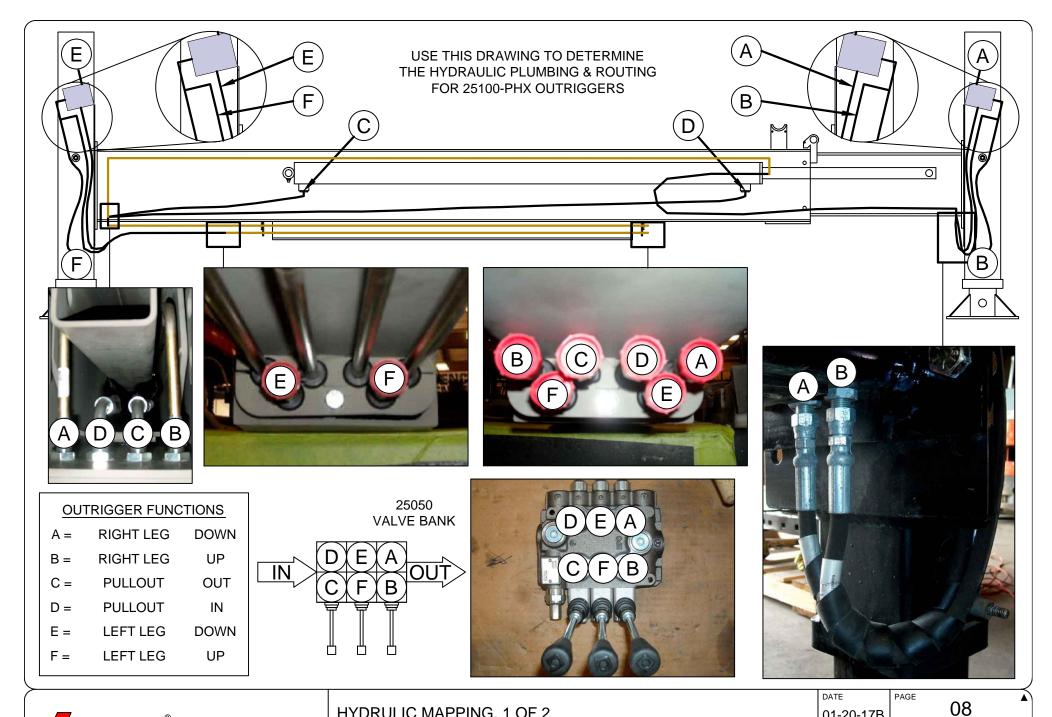




VENCO VENTURO INDUSTRIES LLC CINCINNATI, OHIO HYDRULIC MAPPING, 1 OF 2

01-20-17B SUPERSEDES

25446

25100-PHX OUTRIGGERS

03-17-16A

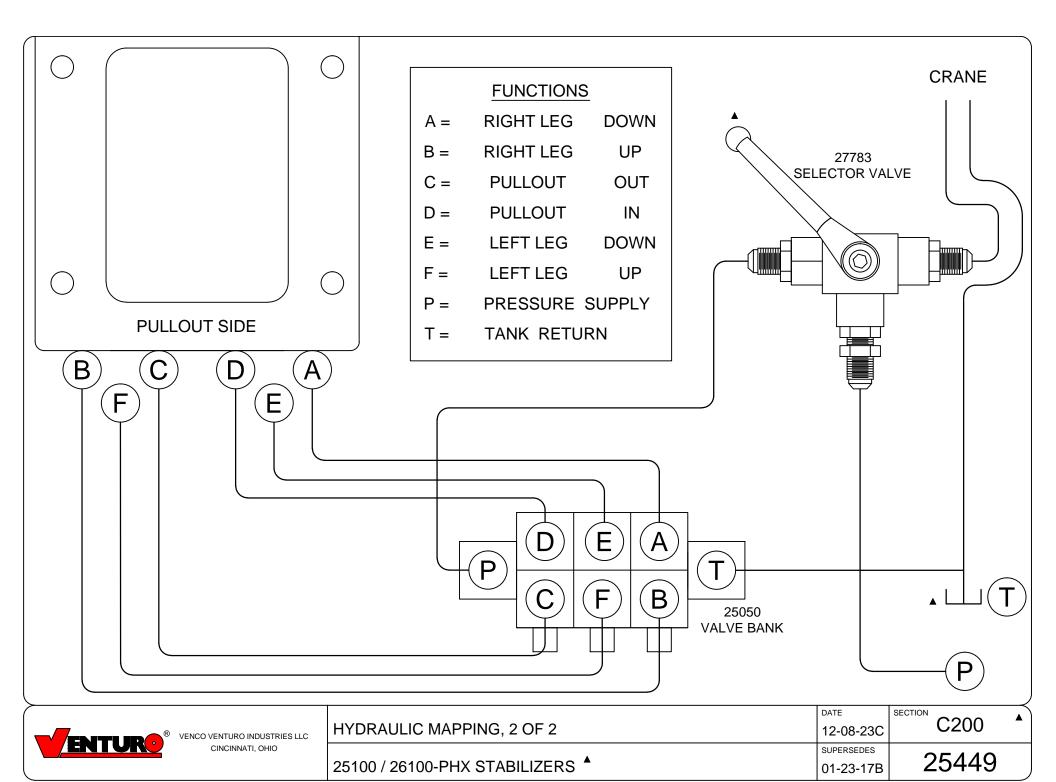

RECOMMENDED DEPARTURE ANGLE



`				
			DATE	PAGE
	® VENCO VENTURO INDUSTRIES LLC	RECOMMENDED DEPARTURE ANGLE	08-25-22A	-
	ENTURO VENTURO INDUSTRIES ELC CINCINNATI, OHIO		SUPERSEDES	05405
$\left(\right.$		REAR MOUNTED OUTRIGGERS	01-18-17	25485

MOUNTING THE OUTRIGGER LEGS, 25100 SERIES OUTRIGGERS

FOLLOW INSTRUCTIONS FOR MOUNTING 25100 SERIES OUTRIGGER LEGS.

▲ 1. DETERMINE PLACEMENT OF OUTRIGGER LEGS. REFER TO MODEL SPECIFIC 'OVERALL DIMENSIONS' PAGE.

2. USE HARDWARE & FASTENERS PROVIDED (REFERENCE IMAGE BELOW):


[8] HEX HEAD CAP SCREW; 5/8-11 X 1-1/2", GR. 8, ZINC


[8] LOCK NUT; 5/8-11, GR. 8, ZINC, NYLON-INSERT

3. INSERT BOLTS POINTING AWAY FROM OUTRIGGER (REFERENCE IMAGE BELOW).

4. TORQUE OUTRIGGER LEG BOLTS & NUTS TO 190 FT-LBS EACH.

5. PLACE 24964 DANGER DECAL, [1] ON EACH LEG (SEE RIGHT).

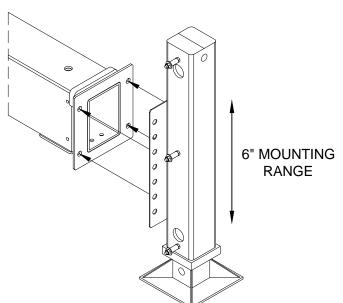

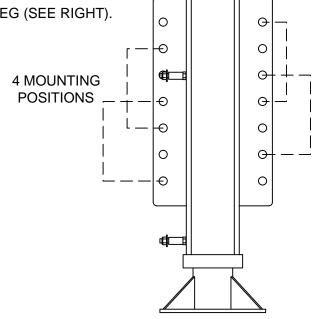


DECAL

PLACEMENT

Ţ



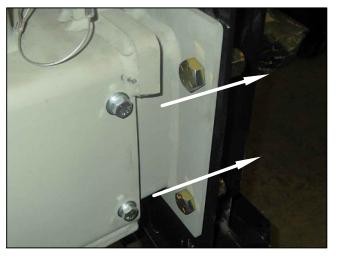

ENTURO ®	
-----------------	--

MOUNTING THE LEGS	01-23-17A	11
	SUPERSEDES	25/20 2
25100 SERIES OUTRIGGERS	03-11-16	25428-2

ASSEMBLY OF 25100-PHX OUTRIGGER WITH LESS-CROSSTUBE CONFIGURATION




PLACE [1] UHMW PAD ON PULLOUT PAGE 15 - ITEM 1



PLACE [1] UHMW PAD IN CROSSTUBE PAGE 15 - ITEM 1



ENSURE PULLOUT CYLINDER HOUSING & PLUMBING ARE TIED

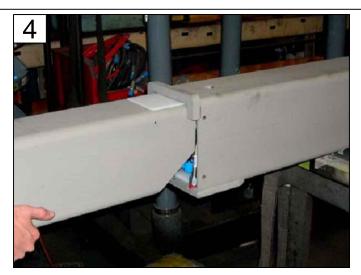

SLIDE PULLOUT INTO CROSSTUBE



FASTEN 25065 NUT BAR RETAINERS IN CROSSTUBE PAGE 15 - ITEMS 2, 7, 8, & 9



FASTEN 25077 NUT BAR RETAINER IN CROSSTUBE PAGE 15 - ITEMS 3, 4, 5, & 6



VENCO VENTURO INDUSTRIES LLC CINCINNATI, OHIO

LESS-CROSSTUBE ASSY	
25100-PHX OUTRIGGERS	

DATE PAGE
01-23-17A
SUPERSEDES

12

03-11-16

25443

ASSEMBLY OF 25100-PHX OUTRIGGER WITH LESS-CROSSTUBE CONFIGURATION



FASTEN BULKHEADS - SEE NEXT STEP'S IMAGE PAGE 15 - ITEM 12



FASTEN 25138 TUBES TO BULKHEADS PAGE 15 - ITEM 13



PUSH GROMMETS AROUND TUBES
PAGE 15 - ITEM 15



PLACE 25139 TUBES PAGE 15 - ITEM 14



CLAMP AROUND GROMMETS PAGE 15 - ITEM 16



FASTEN CLAMP, PAGE 15 - ITEMS 4 & 17 REPEAT STEPS 9 TO 11 FOR OPPOSITE CLAMP



VENCO VENTURO INDUSTRIES LLC CINCINNATI, OHIO

LESS-CROSSTUBE ASS		

DATE PAGE 01-23-17A

13

25100-PHX OUTRIGGERS

SUPERSEDES 03-11-16

25444

ASSEMBLY OF 25100-PHX OUTRIGGER WITH LESS-CROSSTUBE CONFIGURATION



UNTIE PULLOUT CYLINDER HOUSING & PLUMBING



SEE HYDRAULIC MAPPING PAGES 8 & 9




INSERT SHAFT & COLLARS INTO CYLINDER HOUSING



PUSH SHAFT INTO TOP SLOT OF CROSSTUBE



WITH CYLINDER HOUSING CENTERED LOCTITE & FASTEN COLLARS FLUSH

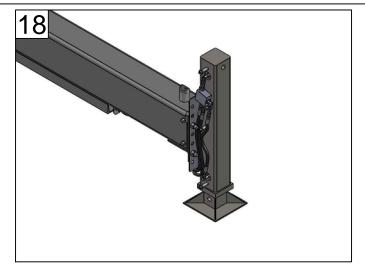

PROCEED TO MOUNTING OF LEGS & HYDRAULICS



VENCO VENTURO INDUSTRIES LLC CINCINNATI, OHIO

LESS-CROSSTUBE ASSY	

▲ DATE PAGE 01-23-17A

14

25100-PHX OUTRIGGERS

SUPERSEDES 03-11-16

25445

SECTION 400

REPLACEMENT PARTS




PARTS BREAKDOWN, 25100-PHX OUTRIGGERS (LESS-CROSSTUBE PARTS INCLUDED)

			1	
			Q ⁻	ΓΥ
#	PART #	DESCRIPTION	-SL	-LL
*1	25081	UHMW PAD; 3-1/8 X 3-1/2 X 3/8	2	2
*2	25065	NUT BAR RETAINER	2	2
*3	25077	NUT BAR RETAINER	1	1
*4	!HHCS03118075	HEX HEAD CAP SCREW; 5/16-18 X 3/4, GR. 5	2	2
*5	!LWSH-031	LOCK WASHER; 5/16, GR. 5	2	2
*6	!FWSH-031	FLAT WASHER; 5/16, GR. 5	2	2
*7	!HHCS03816063	HEX HEAD CAP SCREW; 3/8-16 X 5/8, GR. 5	4	4
*8	!LWSH-038	LOCK WASHER; 3/8, GR. 5	4	4
*9	!FWSH-038SAE	FLAT WASHER; 3/8, GR. 5	4	4
*10	!HHCS06311150-8	HEX HEAD CAP SCREW; 5/8-11 X 1-1/2, GR. 8	8	8
*11	!LNUT-06311-8	LOCK NUT; 5/8-11, GR. 8, NYLON INSERT	8	8
*12	H2701-0606	ADAPTER FITTING; 90° BULKHEAD, 6MJ-6MJ	4	4
*13	25138	HYDRAULIC TUBE, 60"	4	4
*14	25139	HYDRAULIC TUBE, 47"	2	2
*15	14883	GROMMETS, HYDRAULIC TUBES	12	12
*16	25157	CROSSTUBE CLAMP PLATE	2	2
*17	!LNUT-03118	LOCK NUT; 5/16-18, GR.5, NYLON INSERT	2	2
*18	28446	CLAMPING SHAFT COLLAR - 3/4 ID	2	2
*19	25051	SHAFT, CYLINDER HOUSING	1	1
*20	24964	DECAL; DANGER, CRUSHING INJURY	2	2
21	SEE PAGES 19 & 20	HYDRAULIC LEG; SHORT, LEFT, 25100 O.R.	1	-
22	SEE PAGES 19 & 20	HYDRAULIC LEG; SHORT, RIGHT, 25100 O.R.	1	-
23	SEE PAGES 19 & 20	HYDRAULIC LEG; LONG, LEFT, 25100 O.R.	-	1
24	SEE PAGES 19 & 20	HYDRAULIC LEG; LONG, RIGHT, 25100 O.R.	-	1
*25	25050	VALVE BLOCK, 3-SPOOL	1	1
*26	H6400-0808	ADAPTER FITTING; STRAIGHT, 8MJ-8MO	2	2
*27	H6400-0608	ADAPTER FITTING; STRAIGHT, 6MJ-8MO	6	6
*28	27783	SELECTOR VALVE	1	1
*29	27784	BRACKET, SELECTOR VALVE	1	1
30	INST-21024	OUTRIGGER & ACCESSORIES MANUAL	1	1
31	25085-2	CROSSTUBE; 25100 SERIES OUTRIGGERS	1	1
32	-	-	1 -	-
*33	!HHCS03118063	HEX HEAD CAP SCREW; 5/16-18 X 5/8, GR. 5	2	2

^{*} WHEN PURCHASED IN "LESS CROSS TUBE" ("LCT") CONFIGURATION, THESE ITEMS WILL BE SHIPPED LOOSE AND REQUIRE INSTALLATION



PARTS BREAKDOWN	07-30-24E	15
	SUPERSEDES	05440
25100-PHX OUTRIGGERS	07-26-24D	25442

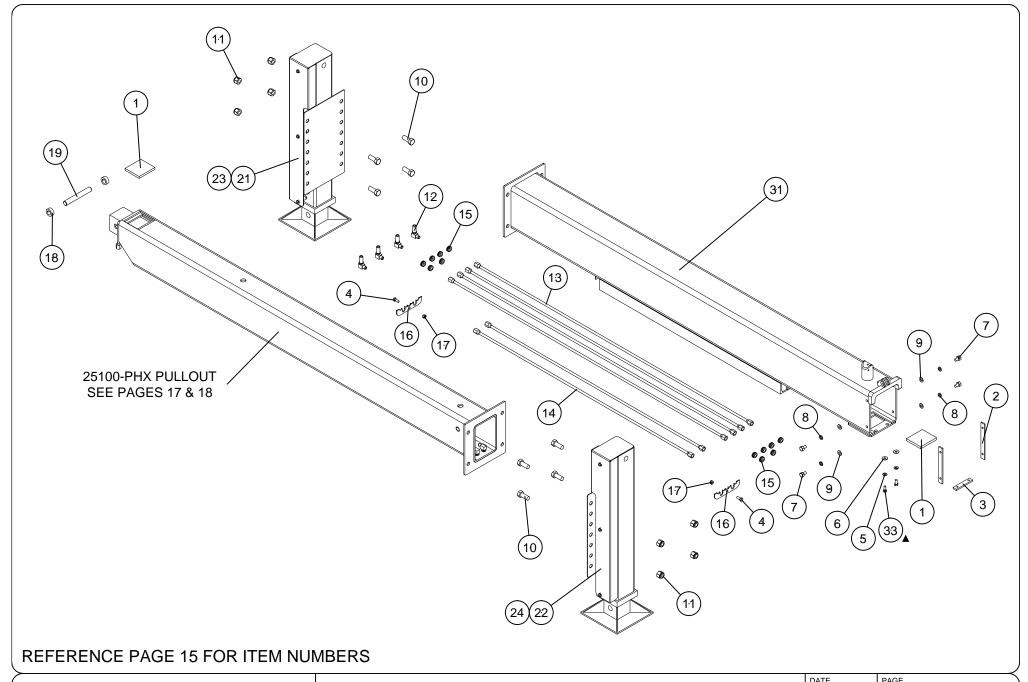

ENTURO®

VENCO VENTURO INDUSTRIES LLC CINCINNATI, OHIO


PARTS BREAKDOWN (LESS-CROSSTUBE PARTS INCLUDED)	07-29-24B	16
25100-PHX OUTRIGGERS	SUPERSEDES 01-23-17A	25441

PARTS BREAKDOWN, 25100-PHX PULLOUT ASSEMBLY

#	PART#	DESCRIPTION	QTY
1	25087-2	PULLOUT; 4', 25100-PHX OUTRIGGERS	1
2	25086	EXTENSION CYLINDER; 4', 25100-PHX	1
3	25088	HOUSING; EXTENSION CYLINDER BASE-END	1
4	25137	HYDRAULIC TUBE; RIGHT LEG, DOWN	1
5	25136	HYDRAULIC TUBE; RIGHT LEG, UP	1
6	25149	HOSE ASSEMBLY; RIGHT LEG, UP & DOWN	2
7	25154	HOSE ASSEMBLY; CYLINDER, OUT	1
8	25155	HOSE ASSEMBLY; CYLINDER, IN	1
9	25049	SHAFT; CYLINDER & HOUSING, BASE-END	1
10	!SRNG-075	SNAP RING; 3/4", PLATED	2
11	25052	SHAFT; CYLINDER & PULLOUT, ROD-END	1
12	28446	CLAMPING SHAFT COLLAR - 3/4" ID	4
13	H2701LN-0606	BULKHEAD FITTINGS; 90°, 6MJ-6MJ, L-NUT	2
14	H6400-0408	HYD TUBE ADAPTER - 4MJ-8MO	2



	DATE	PAGE
PARTS BREAKDOWN	07-30-24C	17
	SUPERSEDES	05454
25100-PHX PULLOUT ASSY	07-26-24B	25451

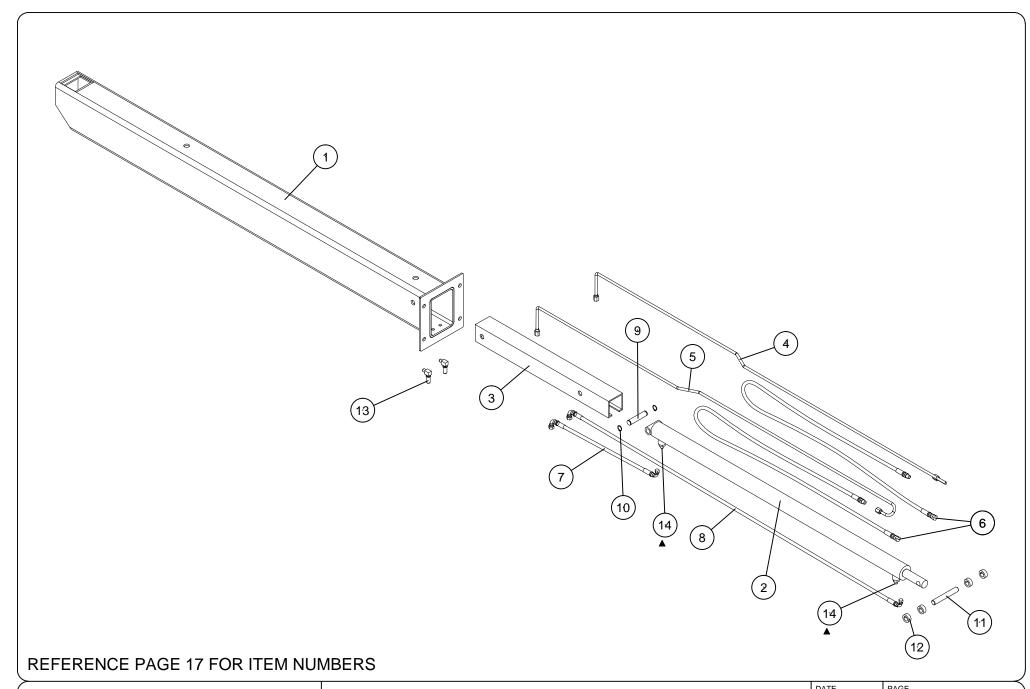



VENCO VENTURO INDUSTRIES LLC CINCINNATI, OHIO


PARTS BREAKDOWN	07-30-24B	18
	SUPERSEDES	25450
25100-PHX PULLOUT ASSEMBLY	01-23-17A	Z3430

PARTS BREAKDOWN, 25100 SERIES HYDRAULIC LEGS ASSEMBLY

25100 SERIE		25100 SERIES OUTRIGGERS	SH	ORT	LO	NG	
	# DESCRIPTION		LEFT RIGHT LEFT RIGHT		RIGHT		
Ī				QUAI	YTITY		PART#
Ī	1	HYDRAULIC LEG; SHORT, LEFT-SIDE	1	_	_	_	25064-1
ľ	2	HYDRAULIC LEG; SHORT, RIGHT-SIDE	-	1	-	-	25064-2
Ī	3	HYDRAULIC LEG; LONG, LEFT-SIDE	*	=	1	H	25055-1
ľ	4	HYDRAULIC LEG; LONG, RIGHT-SIDE	-	-	-	1	25055-2
ľ	5	COVER; SHORT LEG, LEFT-SIDE	1	-	-	-	25069-1
ľ	6	COVER; SHORT LEG, RIGHT-SIDE	=	1	-	Е	25069-2
ľ	7	COVER; LONG LEG, LEFT-SIDE	-	-	1	ш	25068-1
ľ	8	COVER; LONG LEG, RIGHT-SIDE	-	-	-	1	25068-2
ľ	9	HOSE ASSY KIT -SL (INCLUDES HOSE AND FITTING)	1	1	-	н	25193-KIT
Ī	10	HOSE ASSY KIT -LL (INCLUDES HOSE AND FITTING)	-	-	1	1	25217-KIT
ľ	11	HOSE ASSEMBLY; 47", 4FX-6MJ, SHORT LEG, LEFT-SIDE	2	-	-	-	25151
ľ	12	HOSE ASSEMBLY; 27", 4FX-6FX, SHORT LEG, RIGHT-SIDE	-	2	-	-	25147
ľ	13	HOSE ASSEMBLY; 54", 4FX-6MJ, LONG LEG, LEFT-SIDE	-	_	2		25153
ľ	14	HOSE ASSEMBLY; 37", 4FX-6FX, LONG LEG, RIGHT-SIDE	-	-	-	2	25152
ľ	15	VALVE BLOCK; CHECK BODY & CARTRIDGE	1	1	1	1	22765
ľ	16	SPACER; HYDRAULIC LEG COVERS	3	3	3	3	25070
ľ	17	FLAT WASHER; 5/16, GR. 5, ZINC	3	3	3	3	!FWSH-031
ľ	18	LOCK NUT; 5/16-18, GR. 5, ZINC, NYLON-INSERT	3	3	3	3	!LNUT-03118
İ	19	ADAPTER FITTING; 90° ELBOW, 6MO-6MJ	1	1	1	1	H6801L-0606
ľ	20	ADAPTER FITTING; COUPLING SWIVEL, 6FJX-6FJX	1	1	1	1	H6565-0606
f	21	ADAPTER FITTING; ADAPTER, 6MJ-8MP	1	1	1	1	H2404-0608
ľ	22	ADAPTER FITTING; 90° ELBOW, 6MO-4MJ	1	1	1	1	H6801-0406
	23	ADAPTER FITTING; T-SHAPE, 4MJ-4FJX-4MJ	1	1	1	1	H6602-040404
ļ	24	ADAPTER FITTING; CONNECTOR, 6MO-4MJ	1	1	1	1	H6400-0406
	25	ADAPTER FITTING; 90° ELBOW, 4M J-4FX	1	1	1	1	H6500-0404
ļ	26	-	_	<u>u</u>	_	_	-

REFERENCE 25453 PARTS DRAWING

			DATE	PAGE
	VENCO VENTURO INDUSTRIES LLC	PARTS BREAKDOWN	09-05-24C	-
ENTUR	CINCINNATI, OHIO		SUPERSEDES	05450
		25100 SERIES HYD. LEGS	05-23-23B	25452

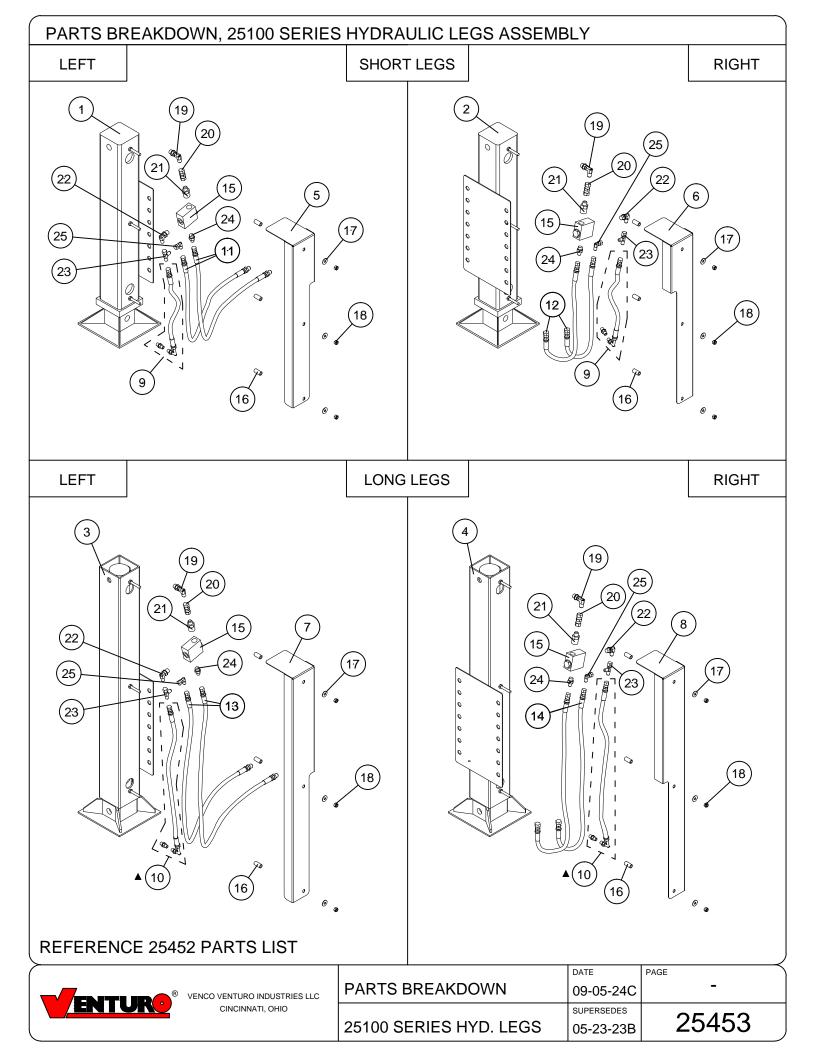

VENTURO CRANES LIMITED WARRANTY POLICY



Venturo products are built to last...we guarantee them.

As a purchaser of any new Venturo product covered by warranty, you will receive 1 year of the most complete coverage available...and, at no added cost to you.

1-Year Limited Warranty Policy

This limited policy warrants new products of Venturo to be free from defects in material and workmanship for a period of one (1) year from date of original installation. OEM products or accessories purchased by Venturo as part of or offered with our product will carry the OEM manufacturer's respective warranty. Our warranty covers:

- Repair or replacement of product
- Labor to repair or replace product
- Freight to return and/or replace product

We shall not be liable for any contingent liabilities arising out of the improper function of any products. Warranty shall become void if the product is improperly installed, modified, damaged, abused or used for application other than intended use. There is no warranty of merchantability, fitness for a particular purpose, warranty arising from course of dealing or usage of trade, or any other implied or expressed warranty, except as made specifically herein. This warranty supersedes all previous warranties, written or implied.

Warranty Claims

Venco Venturo Industries LLC will make a good faith effort for prompt correction or other adjustment with respect to any product, which proves to be defective after our inspection and within the warranty period. Before any repairs are attempted or before returning any product, your Venturo Distributor is required to obtain a warranty claim number. This number is necessary for any claim to be considered. To obtain a warranty claim number, Venturo requires the model and serial number. Only authorized Venturo Distributors can perform warranty. For the name and address of your local Venturo Distributor call the **Warranty Claim Department - 513-772-8448.**

WARNING - It is the responsibility of the installer to ensure the installation is completed according to the manufacturer's recommendations, ensure the ultimate user understands how to operate product in a safe manner, and understands the need for regular service and maintenance by an authorized Venturo Distributor. No modifications or alterations may be made to any Venturo product without the expressed written consent of Venco Venturo Industries LLC. Installation of any Venturo product must be done by an authorized Venturo Distributor, to the standards of the industry; including maintenance, service and affixing of all instruction, safety and warning decals. Users should be instructed as to the safe operation at time of delivery. Maintenance, service, operation and safety warning decals are available on request from Venco Venturo Industries LLC.

VENCO VENTURO INDUSTRIES LLC

12110 BEST PLACE | CINCINNATI, OHIO 45241 P: 800-226-2238 | F: 513-326-5427 www.venturo.com

Revised: January 2015 12-00073_VNT1-D